

Delta brand PIDs have many features we don't utilize - we just want an accurate reading & on/off valve control. While this is not a replacement for reading the manual that comes with the PID, it will help make sense of which settings need to be changed during initial setup.

1. Hold Set key for 3 seconds – PID will enter 'Initial Settings Mode'
2. CnPT – Choose 'PT' if using PT thermocouples that ABS supplies
3. Hit the Next key (the circular arrow key) - You can now choose between Celsius and Fahrenheit
4. Hit Next until you reach Ctrl – Set to 'onoff' to remove the PID logic, making it basic on/off control based on your PV & SV
5. Hit Next, S-HC setting allows you to choose between heating & cooling modes
6. Hit the Set key to return to 'Operation Mode'
7. Set your desired SV. If your thermocouple is already hooked up and the settings make sense, the OUT1 light should illuminate. If not, hit Next from the operation mode screen. Set to Run if currently set to Stop. Should hear valve energize.

For further fine tuning, refer to the manual included with the unit / link below
<https://www.abs-commercial.shop/assets/images/DELTAPID.PDF>